



GOLF CLUB CARRIER RACK

OPERATING AND MOUNTING GUIDE

WARNING:

You are responsible for securing the rack to your vehicle, checking the attachments prior to each use, and periodically inspecting the products for adjustment, wear, tear, and damage. You must read and understand all instructions, cautions, and assume responsibility when operating the rack. Should you have any questions, please call or text us at 919.590.0719 or email us at ride@2x2cycles.com. We at 2x2 Cycles have made every effort to produce a safe, secure, and enjoyable product. The user of 2x2 Cycles products accepts full responsibility and does so at their own risk. Please ride responsibly and be aware that you are carrying your golf clubs with you.

CONGRATULATIONS ON YOUR PURCHASE OF THE 2X2 CYCLES GOLF CLUB CARRIER RACK!

IMPORTANT: READ BEFORE SETUP AND OPERATION


It is critical that all 2x2 Cycle racks and accessories be properly and securely attached to your motorcycle. Improper attachment/usage could result in an accident and cause bodily injury or death to you and/or to others. You are responsible for securing the racks and accessories to your motorcycle, checking the attachments prior to use, and periodically inspecting the products for adjustment, wear, and damage. Therefore, you must read and understand all of the instructions and cautions supplied with your 2x2 Cycles product prior to installation or use. If you do not understand all of the instructions and cautions, or if you have no mechanical experience and are not thoroughly familiar with the installation procedures, you have this product installed by a professional, such as a qualified garage.

WE ARE ALWAYS HERE TO ANSWER YOUR QUESTIONS

CALL/TEXT: 919.590.0719

EMAIL: RIDE@2X2CYCLES.COM


GOLF BAG CARRIER CADDY ASSEMBLY

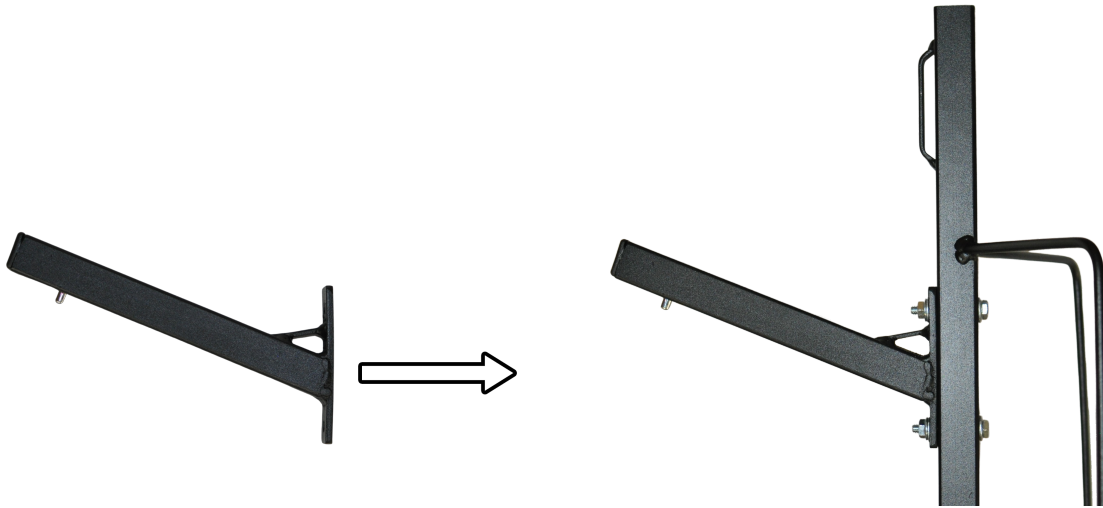

1. The bolts for securing the mounting arm/golf neck to the golf caddy should already be slotted in the spine of your golf caddy.
2. Align the mounting arm onto the bolts as seen in the photo above (**NOTE THE PUSH PIN FACING DOWNWARDS**).
3. Slide the provided washers onto the bolts.
4. Screw on and tighten down with the provided lock nuts. **THAT'S IT!**

GOLF CARRIER ARM TO BASE PLATE / QR BLOCK

After assembling the golf bag carrier caddy, you will want to insert the golf bag carrier mounting arm into your base plate/quick release block. You will notice a push button on the bottom of the golf neck. This is a **SAFETY STOP** should you forget to tighten the friction nut when unloaded. Depress the button to install and then **DEPRESS AGAIN** when it falls into the stop to push it **FURTHER** into the rack.

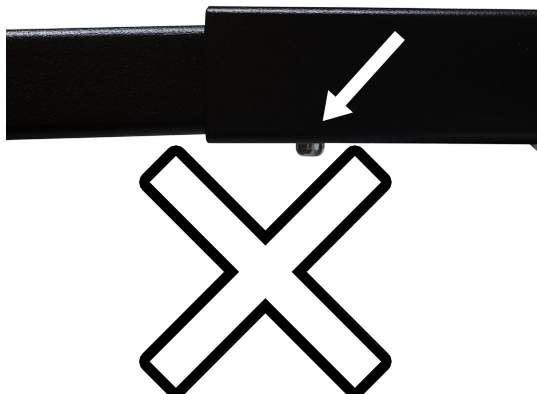


LOADING GOLF BAG TO RACK

Set your golf bag into the rack, on top of the T plate where the grip tape is located. Take the included 2x2 Cycles high viz straps and run them through the loops located on the back spine of the caddy. Once that is done, tightly velcro the straps and cinch down your golf bag.



USING THE LOAD DISTRIBUTION STRAP (LDS)

At the top of your golf caddy is a loop, also used for a velcro strap. Feed the cargo strap through the loop and tie the other ends down to the passenger foot pegs or frame, top box, etc to create a forward triangle. This will transfer the load off the rear and keep it static. **NOTE:** Please make sure the LDS is deployed to points that are **NOT** part of the golf bag carrier rack.

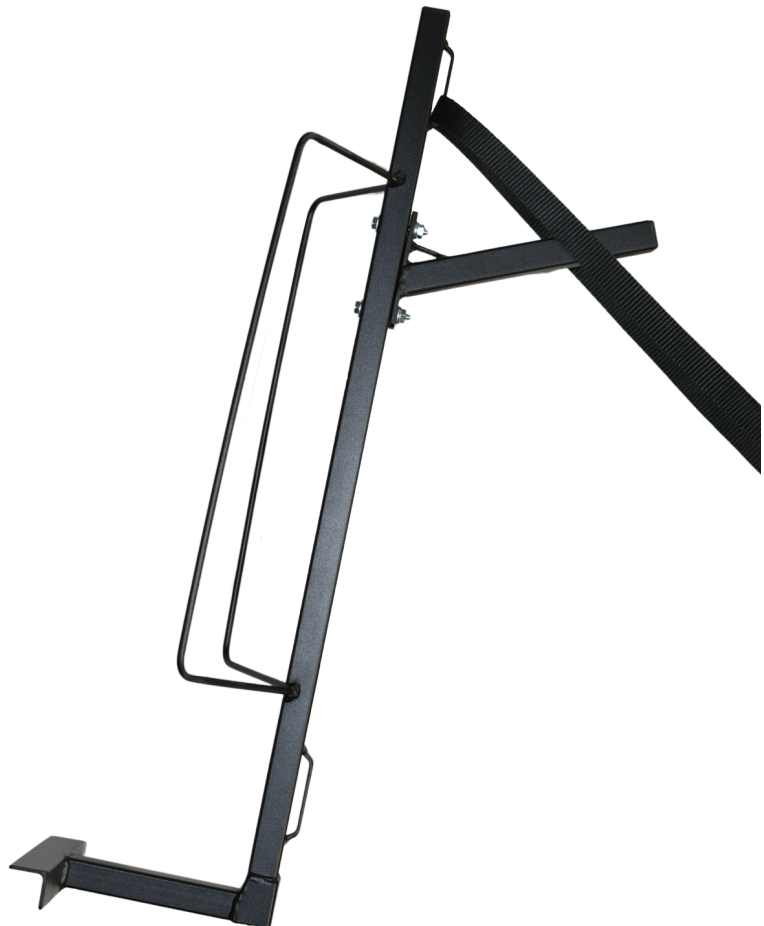

WIRING COLORS MANUAL

PLEASE NOTE: If you don't see your motorcycle listed or if you do not see the wires on your motorcycle that match our list, please refer to your motorcycle owners manual or dealership for further identification.

The functions of the wires on **OUR** light kit are as follows:

White = Ground

Black = Running

Red = Brake

LIGHT KIT WIRES	WHITE (ground)	BLACK (running)	RED (brake)
BMW	Brown	Gray w/Black or Red w/Green	Gray w/Yellow
Harley Davidson	Black	Orange w/White Orange w/Blue	Red w/Yellow
Honda	Green	Brown or Brown w/Black	Green w/Red or Green w/Yellow
Kawasaki	Black w/Yellow	Solid Red	Blue w/Red
Suzuki	Black w/White or Black w/Yellow	Brown or Green	White w/Black
Yamaha	Black	Blue	Yellow
Triumph	Black	Yellow	Green w/Purple

No cutting is necessary! Simply identify the correct wires (*on your motorcycle*), fold the pinkish colored clip over the respective wire and snap shut. This creates a male connection. Now plug in the female connector (*wiring from the golf caddy*) and that's it. Test to make sure running and brake lighting functionality operates as expected.

